#### **FEATURES**

- Operates over 10 to 18VDC power range
- Adjustable thresholds for cut in and cut out points between 1 to 30VDC and 0 to 150VAC
- 12 Amp SPDT relay contact
- Automatic reversible action with the cut in and cut out adjustments
- Adjustable 0 to 255 seconds time delay on cut in
- Compact size eliminates mounting problems


#### **DESCRIPTION**

The VRDC 12V-30 is an Adjustable Voltage Relay for DC applications. The VRDC 12V-30 can be used in applications where a varying DC voltage is used to switch an adjustable relay such as in generator control or a low battery voltage load disconnect. The cut in voltage, cut out voltage, and the time delay value are adjusted on multi-turn potentiometers by measuring the respective test points and adjusting the potentiometers per the set-up instructions and chart on the back side of last page.

# **OPERATION**

The VRDC 12V-30 uses a half-wave rectifier filter circuit which allows the VRDC 12V-30 to operate from a range of 10 to 18VDC power source. The VRDC 12V-30's input is internally scaled so that a 0 to 30VDC signal equals 0 to 5VDC as shown in the chart on the back side of this page. An LED lights when the relay is pulled in.

# PHYSICAL CONFIGURATION

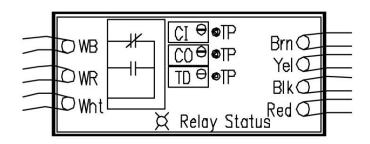

The test points shown are for field calibration of the cut in, cut out, and time delay potentiometers.



# **SPECIFICATIONS**

Size & Weight: 3.2 x 1.2 x .75 inches

Enclosure: Epoxy potted in PVC plastic

Power: 10 to 18VDC

Mounting: Double sided stick tape
Load Capacity: 12 Amps @ 28VDC, SPDT

12 Amps @ 120VAC, SPDT HASCO KLT1C12DC12

Input Signals: 0 to 30VDC, 0 to 150VAC

0 to 60VDC w/ 60.4KΩ resistor

Thresholds: Cut in @ 1 - 30VDC

Cut out @ 1 – 30VDC

0.25VDC minimal differential

Time Delay: 0 to 255 seconds delay on energize

Action: Direct – energizes on increase

Reverse – energizes on differential

Signal Filtering: >2Hz

Current Draw: Continuous – less than 1mA

Relay energized - 30mA

Indication: LED indicates relay is energized


Temperature: -20 to 75°C

Relay Life: 100 million plus mechanical operations






### **APPLICATION 1 RUN TIME METER CONTROL**

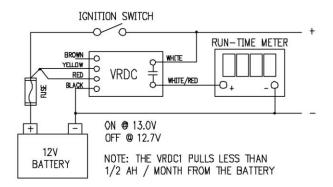


The VRDC 12V-30 senses the alternator output and energizes the run-time meter only when the engine is running and the ignition is on. This prevents the meter from running needlessly when the ignition is left on as is often the case with recreational boats.

### **APPLICATION 2 LOAD DISCONNECT**

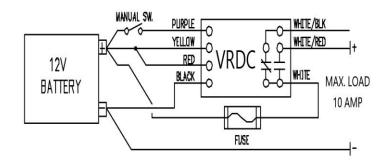


The VRDC 12V-30 energizes and disconnects the load (with time delay) below the off voltage point to prevent further battery discharge. Use N.O. contacts for de-energize on low battery voltage condition.

#### APPLICATION 3 GENERATOR CONTROL – BATTERY CHARGING

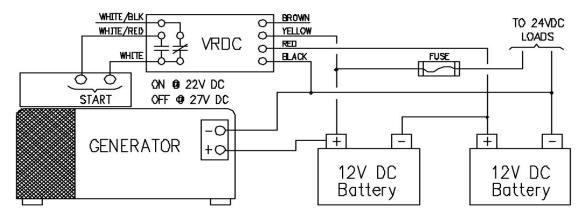


The VRDC 12V-30 senses when the battery bank is being discharged below a threshold point and starts the generator to charge the batteries. It shuts off the generator when the desired battery voltage is achieved. The time delay prevents the generator from starting on temporary battery voltage drops.

### APPLICATION 4 BATTERY CHARGE CONTROLLER

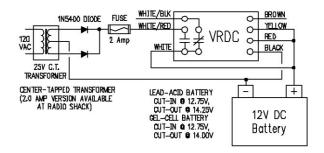

The emergency battery needs to be charged in a reasonable time after use. The VRDC 12V-30 senses the battery voltage, starts the charging current when the voltage drops below a threshold and disconnects the charging current when the battery is fully charged.

### **APPLICATION 5 AC POWER - EMERGENCY LIGHTS**

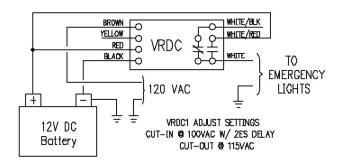

The VRDC 12V-30 senses the 120VAC line voltage and switches on the emergency lights with a 2 second delay upon sensing a power failure. The emergency lights turn off when power returns.




# **APPLICATION 6 LV BROWN OUT PROTECTION**

#### 120V CONTACTOR DISCONNECT oНo H-V 120V AC FUSE RC MDTOR N WHITE/BLK G VRDC12V YELLOW WHITE/RED BLACK RED 110V//12VAC TRANSFORNER


The VRDC 12V-30 senses the AC line voltage and disconnects a motor or other sensitive load if the low voltage condition persists past the time delay period. The time delay prevents the VRDC from dropping out the motor due to normal inrush current draw. Cut out below 105VAC, cut in @ 112VAC.

# APPLICATION 7 GENERATOR CRANK DISCONNECT

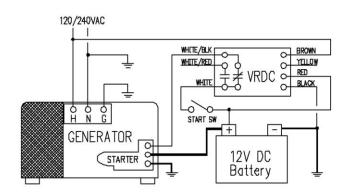

The VRDC 12V-30 senses the AC voltage output from a generator and when the desired threshold is reached, disconnects the starter circuit to prevent excessive cranking. Even though the AC voltage adjustment is 150VAC maximum, the module is not damaged by seeing 240VAC on the voltage input wire.

# **APPLICATION 8 48VDC EXCESSIVE POWER SHUNT**

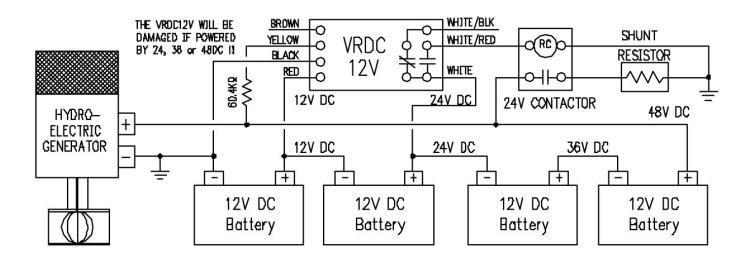

The VRDC 12V-30 senses the battery voltage and activates a contactor to shunt the excessive power thru a load resistor to prevent an over voltage condition. The VRDC 12V must be powered by 12 DC from the battery bank even though it senses a higher voltage level thru the series input resistor.

### ADJUSTMENT FORMULAS

0 TO 30VDC - Vadj = Vin X 0.1667 Vadj - Adjustment voltage at cut-in & cut-out test points

0 TO 60VDC - Vadj = Vin X 0.0833 Vin - Input voltage signal

0 TO 150VAC - Vadj = Vin X 0.0333 Min. Resolution - 0-5V Adjust voltage / 255 steps = 0.02V DC

TIME DELAY - Vadj = Time Delay (sec) X 0.01961

### **ADJUSTMENT TABLE**

Input Voltage Ranges			Time Delay	cut-in/out & delay Tp volts
1-30VDC	2-60VDC	5-150VAC	0-255 Sec	0-5VDC
1.0v	2.0v	5.0v	8.5 sec	0.167v
2.0v	4.0v	10.0v	17 sec	0.333v
3.0v	6.0v	15.0v	25.5 sec	0.500v
4.0v	8.0v	20.0v	34 sec	0.667v
5.0v	10.0v	25.0v	42.5 sec	0.833v
6.0v	12.0v	30.0v	51 sec	1.000v
7.0v	14.0v	35.0v	59.5 sec	1.167v
8.0v	16.0v	40.0v	68 sec	1.333v
9.0v	18.0v	45.0v	76.5 sec	1.500v
10.0v	20.0v	50.0v	85 sec	1.667v
11.0v	22.0v	55.0v	93.5 sec	1.833v
12.0v	24.0v	60.0v	102 sec	2.000v
13.0v	26.0v	65.0v	110.5 sec	2.167v
14.0v	28.0v	70.0v	119 sec	2.333v
15.0v	30.0v	75.0v	127.5 sec	2.500v

Input Voltage Ranges			Time Delay	cut-in/out & delay Tp volts
1-30VDC	2-60VDC	5-150VAC	0-255 Sec	0-5VDC
16.0v	32.0v	80.0v	136 sec	2.667v
17.0v	34.0v	85.0v	144.5 sec	2.833v
18.0v	36.0v	90.0v	153 sec	3.000v
19.0v	38.0v	95.0v	161.5 sec	3.167v
20.0v	40.0v	100.0v	170 sec	3.333v
21.0v	42.0v	105.0v	178.5 sec	3.500v
22.0v	44.0v	110.0v	187 sec	3.667v
23.0v	46.0v	115.0v	195.5 sec	3.833v
24.0v	48.0v	120.0v	204 sec	4.000v
25.0v	50.0v	125.0v	212.5 sec	4.167v
26.0v	52.0v	130.0v	221 sec	4.333v
27.0v	54.0v	135.0v	229.5 sec	4.500v
28.0v	56.0v	140.0v	238 sec	4.667v
29.0v	58.0v	145.0v	246.5 sec	4.833v
30.0v	60.0v	150.0v	255 sec	5.000v

# ADJUSTMENT PROCEDURES

- 1. The cut-in, cut-out and time-delay pot adjustments are measured on the respective test points by a DC voltmeter. The cut-in/out 0 to 5VDC represents 0 to 30VDC, 0 to 60VDC, 0 to 150VAC input signal. The time delay 0 to 5VDC represents 0 to 255 second delay on energize.
- 2. If the cut-in pot is greater than the cut-out pot then the relay energizes when the signal voltage is greater than the cut-in point and de-energizes when the signal voltage drops below the cut-out point. If the cut-in point is less than the cut-out point then the relay energizes when the signal voltage drops below the cut-in point and de-energizes when the signal voltage rises above the cut-out point. If the signal voltage differential between the cut-in and cutout adjustments is not at least 0.25VDC in the 0 to 30V range then the relay will not operate.
- 3. The time delay pots 0 to 5VDC represents 0 to 255 seconds of time delay for the relay to energize on cut-in for either reverse or direct mode. The input signal must exceed the cut-in point for the time delay value or the timing action will start over. The cut-out action is instantaneous.
- 4. After adjusting the VRDC module, interrupt power to insure that the module operates properly. This re-sets the circuitry.

